

# This operation guide describes the basic functions of your GT Series Tenant Station

For complete operation instructions, download the manual from the manufacturer's website: [www.aiphone.com](http://www.aiphone.com)

**AIPHONE®**




**GT-1A Tenant Station**

## Speaker


## Power Source

This tenant station is powered by the system and will always remain on. Contact the building manager if the tenant station in this residence is not working.

## Option Button

 
 Push the option button to activate an external device, such as a garage opener (if included).

## Guard Button


 Push the guard button to call all guard and/or concierge stations connected to the system (if included).

## Tone Off Indicator Light


## Talk/Off Button



Push the Talk/Off button to answer an incoming call. Once answered, conversation becomes hands-free. To "hang up" the conversation, push the Talk/Off button again (this does not turn off the device). If there is a lot of ambient noise at the entrance station, push the Talk/Off button for at least 1 second. Once a "beep" is heard, the conversation mode becomes push-to-talk, which requires the Talk/Off button to be pushed while talking and to be released while listening. The push-to-talk mode helps to reduce sound that can be distracting during hands-free mode. Whether the conversation mode is in hands-free or push-to-talk, the Talk Indicator Light comes on while you speak and will turn off while your visitor speaks.

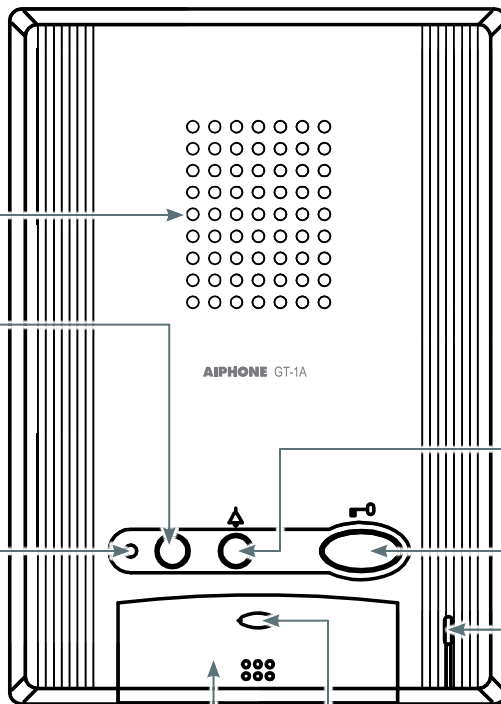

## Door Release Button

 Push the Door Release Button to unlock the entrance during a call.

## Microphone

## Talk Indicator Light

## Chime Volume Control



Use the switch to adjust the chime volume (off, medium, or high). The Tone Off Indicator Light blinks slowly when the chime is muted.

## Volume Control



Use the switch to adjust the communication volume (low, medium, or high).